

PRODUCT SPECIFICATION

SAFETYWARE EasyFit Disposable Ear Plugs with Dispenser

- Ear plug dispenser allows end user to have clean and easy access to hearing protection.
- The dispenser can hold up to 500 pairs of ear plug.
- The ear plug is made of soft Polyurethane (PU) Foam which is easy to insert correctly due to the tapered shape and moderate slow expansion rate.
- The smooth surface on the ear plus further enhances the wearing comfort.
- Features:
 - Dispenser can be mounted on the wall easily
 - Easy to refill
 - Soft & comfortable Polyurethane (PU) Foam ear plug
 - Tapered shape is designed to adjust to most ear canals
 - Bright yellow color provide high visibility
 - Refillable
 - Hygiene
 - Disposable

CARE INSTRUCTIONS

- Clean the ear plug with mild soap and warm water after use
- Avoid using abrasive cleaning agent

APPLICATIONS

- Automotive
- Construction
- Textile
- Aircraft
- Woodworking
- Printing


TECHNICAL DATA

MATERIAL	Polyurethane
COLOR	Yellow
STYLE	Uncorded
SHAPE	Tapered
NRR	32 dB
SNR	37 dB
SIZE	1.3 x 2.4 cm
STANDARD	ANSI S3.19
PACKAGING	1 each of dispenser + 500 prs ear plug
PIECE WEIGHT PER DISPENSER	1.5 kgs

Item Code: HP103R



The right way to wear ear plug:

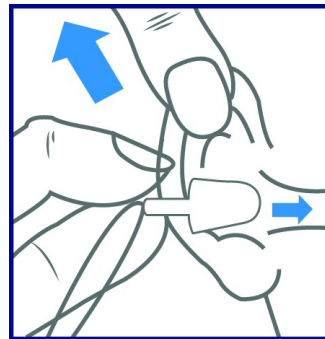

Insert the ear plug with a slight rocking and twisting motion while pulling the outer ear upwards and backwards to straighten the ear canal.

SAFETYWARE SDN. BHD. (632971-X)

Plot 237, Lengkok Perindustrian Bukit Minyak 3,
Bukit Minyak Industrial Estate,
14100 Simpang Ampat, Penang, Malaysia

Tel : +604-5023 882 | Fax : +604-5081 882
www.safetyware.com | info@safetyware.com

It is the product users' responsibility to conduct all the appropriate evaluations & testing to determine the suitability of SAFETYWARE products for use in a particular environment or purpose. SAFETYWARE disclaims all warranties other than as expressly provided.

Date created: 09/01/2019
Revision: 01
Date revised: 28/12/2023